



# Elite 2500 Plug 'n' Play Adaptor Harness HT-141356

## Supported Models

SUBARU LIBERTY MY05 3.0R GEN 4 (JDM & Australian Delivered)  
SUBARU LIBERTY MY04 GT GEN 4 (JDM & Australian Delivered)

## Package Contents

THIS SUBARU LIBERTY MY05 3.0R / MY04 GT PACKAGE CONTAINS THE FOLLOWING:

- SUBARU LIBERTY MY05 3.0R / MY04 GT ELITE 2500 PLUG 'N' PLAY ADAPTOR (HT-141356)
- ELITE SERIES PLUG 'N' PLAY ADAPTOR HARNESS (HT-130201)
- HALTECH AIR TEMPERATURE SENSOR (HT-010200)



# Application Notes

THIS SUBARU LIBERTY MY05 3.0R / MY04 GT ELITE 2500 PLUG 'N' PLAY ADAPTOR HARNESS IS SUITABLE FOR USE WITH A HALTECH **ELITE 2500** ECU ONLY.

ENSURE THAT THE CORRECT BASEMAP IS LOADED BEFORE STARTING THE VEHICLE.

THE BASEMAP IS ONLY FOR USE AS A STARTING POINT AND THE ECU WILL REQUIRE APPROPRIATE TUNING.

**HALTECH WILL NOT BE HELD RESPONSIBLE FOR ENGINE DAMAGE DUE TO THE IMPROPER USE OF BASEMAPS.**

THE 16 PIN AUXILIARY CONNECTOR PROVIDES A NUMBER OF ADDITIONAL INPUT/OUTPUT LINKS TO THE HALTECH ELITE ECU.

THIS KIT IS SUPPLIED WITH SPARE PINS FOR USE WITH THE 16 PIN AUXILIARY CONNECTOR.

**AN APPROPRIATE CRIMPING TOOL IS RECOMMENDED TO USE THE 16 PIN AUXILIARY CONNECTOR.**

A CRIMPING TOOL KIT (PART # HT-070300) CAN BE PURCHASED AT [WWW.HALTECH.COM](http://WWW.HALTECH.COM)

**AFTER THE INSTALLATION OF THIS PLUG 'N' PLAY KIT, FACTORY PANELS MAY BE RE-INSTALLED.**

# Jumper ID Settings

THIS SUBARU LIBERTY MY05 3.0R / MY04 GT PLUG 'N' PLAY ADAPTOR HARNESS IS CAPABLE OF BEING CONFIGURED FOR USE WITH OTHER VARIANTS.

INSIDE THE ADAPTOR BOX THERE IS ONE HEADER WITH WHITE LABELS NEXT TO IT.

TO ACCESS THIS HEADER, REMOVE THE TWO PHILLIPS HEAD SCREWS AND THE FRONT PLATE.

REMOVE ALL REMAINING CONTENTS FROM THE CASE AND LOCATE THE LABELLED HEADER.

THESE LABELS ARE **A, B, C, D, E, F, G, H, I, J, K, L, M, N & O**



THESE JUMPERS MUST BE CHANGED TO USE THIS PRODUCT WITH OTHER COMPATIBLE VARIANTS.

THE JUMPER SETTINGS ARE SHOWN BELOW WITH VARIOUS CONFIGURATIONS.

**THIS PLUG 'N' PLAY ADAPTOR IS FACTORY CONFIGURED TO SUIT SUBARU LIBERTY MY05 3.0R (ADM) APPLICATIONS**

## DEFAULT CONFIGURATION (LIBERTY MY05 3.0R)

 ID JUMPER

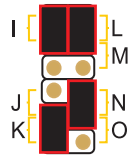
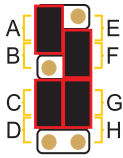


JUMPERS REQUIRED
A
C
F
G
I
K
L
N

## ALTERNATE CONFIGURATION (LIBERTY MY04 GT)

For SPI 2 function set to Brake Switch

 ID JUMPER

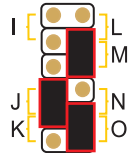
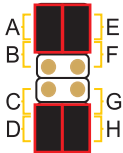


JUMPERS REQUIRED
A
D
E
H
J
M
O

## ALTERNATE CONFIGURATION (LIBERTY MY04 GT)

For SPI 2 function set to Clutch Switch

 ID JUMPER

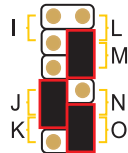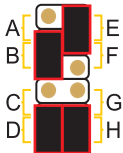

JUMPERS REQUIRED
B
D
E
H
J
M
O

# Elite 2500 Basemaps

MAKE	MODEL	CODE	ENGINE	BASEMAP
SUBARU	LIBERTY	MY05	EZ30	HT-141356 - Subaru Liberty 3.0R MY05 EZ30 ADM.e2500
SUBARU	LIBERTY	MY04	EJ20	HT-141356 - Subaru Liberty GT MY04 EJ20 ADM.e2500

## ECU Location

THE FACTORY SUBARU LIBERTY 3.0R & GT ECU IS LOCATED UNDER THE CARPET IN THE PASSENGER SIDE FOOT WELL (RIGHT-HAND DRIVE (RHD) MODELS). LIFT THE CARPET AND REMOVE THE PROTECTIVE PANEL TO GAIN ACCESS TO THE OEM ECU. THE PROTECTIVE PLATE MAY BE RE-USED AFTER INSTALLATION IS COMPLETE.



Figure 1 - Remove the panel by removing 4 nuts using a 10mm socket.



Figure 2 - Factory ECU is now ready for removal.



# Wideband O2

A Haltech Wideband WBC2 (MY05 3.0R) or Haltech WBC1 (MY04 GT) kit is highly recommended with this product. This is due to the Subaru OEM front O2 sensor(s) not being compatible with direct connection to the Elite ECU. The wideband sensor(s) included in the WBC1 and WBC2 kits can be installed directly in place of the front OEM O2 sensor(s) in non-turbo applications.

The wideband sensor must be located post turbo (MY04 GT) but before the catalytic converter for correct use. Attempting to use the Subaru OEM front O2 sensor, or its location (MY04 GT), will lead to highly inaccurate O2 sensor readings. The OEM front O2 sensor locations (MY05 3.0R) may be used as these are pre-catalyst.

The purpose of post catalytic converter O2 sensor(s) by the OEM is to measure catalyst efficiency and will read very different to pre-catalyst sensor values depending on the catalyst efficiency.

As such it is recommended to not use this post catalytic converter location for wideband O2 sensor placement.



**Figure 3 - Haltech Dual Channel CAN Wideband Kit**

# Air Temperature Sensor

An air temperature sensor is a required sensor used in Volumetric Efficiency (VE) tuning to compensate for changes in air density due to air temperature. Cold air has a higher density than warm air and therefore requires a greater volume of fuel to maintain the same air/fuel ratio.

The Haltech ECU can automatically compensate the fuel delivery for changes in air density based on temperature using the signal received from the air temperature sensor.

On many vehicles the OEM air temperature sensor is located either within the mass airflow sensor or molded into the intake air manifold, however in performance applications the airflow sensor and air intake piping are often modified, removed or replaced. For this reason an air temperature sensor (HT-010200) is provided for use as a substitute to the factory air temperature sensor.


This sensor should be mounted to provide the best representation of the actual temperature of the air entering the combustion chamber, i.e. after any turbocharger, supercharger and intercooler.

The sensor needs to be in the moving air stream to give fast response times and reduce heat soak effects. Be aware in some situations, mounting the sensor into the inlet manifold (especially at the rear) may cause heat soak problems (where the sensor reads the temperature of the manifold itself rather than the air that is moving through the manifold into the engine).

Once a suitable position has been located for the air temperature sensor to be installed, a hole should be drilled and tapped to accept the sensor. The intake manifold or inlet piping should be removed from the engine before this is done to prevent any metal shavings or swarf entering the engine.

This package includes an air temperature sensor (HT-010200). This air temperature sensor should be installed by utilising an auxiliary Analogue Voltage Input (AVI) and signal ground located on the 16 pin auxiliary connector.

Please refer to the auxiliary connector pinout table and sensor wiring diagram below.

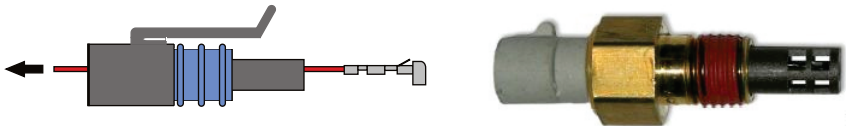


LOOKING INTO FRONT OF CONNECTOR

Termination	
A	Signal Ground
B	Air Temperature Signal

**INSERT WIRE THROUGH PLUG, THEN CRIMP THE PIN INTO THE WIRE AND DRAW BACK TO LOCK**

**Figure 4 - Air Temperature Sensor wiring**

# Auxiliary Connector

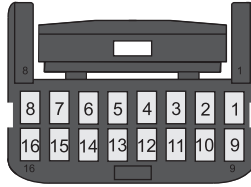


**AUXILIARY CONNECTOR (16 PIN)  
REAR VIEW (WIRE SIDE)**

An auxiliary connector allows easy connection of additional ECU inputs and outputs.  
Please see pinout information below for spare inputs and outputs available to this application.


Position (16 Pin Plug)	Connection	Function	Notes
1	From Haltech ECU (A9)	+5V	+5V DC Sensor Supply (50mA Max)
2	-	-	-
3	-	-	-
4	From Haltech ECU (B14, B15, B16)	SIGNAL GROUND	Signal Ground For Input Sensors
5	From Haltech ECU (B17)	IGN 7	Malfunction Indicator Lamp
6	From Haltech ECU (B18)	IGN 8	Purge Control Solenoid Valve (EVAP) (MY05 3.0R) / Wastegate Control Solenoid (MY04 GT)
7	From Haltech ECU (B8)	SPI 1	Spare SPI (Optional Flex Fuel Input) (MY05 3.0R) / Exhaust CAM Position Sensor LH (+) (MY04 GT)
8	From Haltech ECU (A26)	+12V (INJ)	+12V DC Supply for Relays and Solenoids (500mA Max)
9	From Haltech ECU (A9)	+5V	+5V DC Sensor Supply (50mA Max)
10	-	-	-
11	-	-	-
12	From Haltech ECU (B14, B15, B16)	SIGNAL GROUND	Signal Ground For Input Sensors
13	From Haltech ECU (A29)	INJ 7	Oil Switching Solenoid Valve RH (-) (MY05 3.0R) / Exhaust AVCS Solenoid RH (-) (MY04 GT)
14	From Haltech ECU (A30)	INJ 8	Oil Switching Solenoid Valve LH (-) (MY05 3.0R) / Radiator Fan Control Relay 2 - Main Fan (MY04 GT)
15	-	-	-
16	From Haltech ECU (A26)	+12V (INJ)	+12V DC Supply for Relays and Solenoids (500mA Max)

# Main Connectors

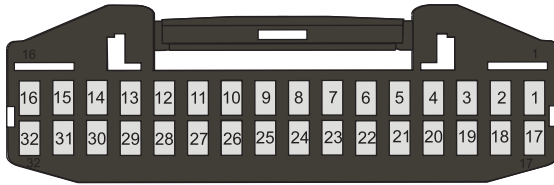

CONNECTOR (32 PIN)  
REAR VIEW (WIRE SIDE)

Position (32 Pin Plug)	ECU Connector (34 Pin Plug)	Function	Description
1	A1	DPO 2	A/C Control Relay
2	A2	AVI 4	APP Main Signal (APP 1)
3	A3	IGN 1	Ignition Coil - #1
4	A4	IGN 2	Ignition Coil - #2
5	A5	IGN 3	Ignition Coil - #3
6	A6	IGN 4	Ignition Coil - #4
7	A7	IGN 5	Ignition Coil - #5 / Spare Output (MY04 GT)
8	A8	IGN 6	Ignition Coil - #6 (MY05 3.0R) / Radiator Fan Control Relay 1 - Sub Fan (MY04 GT)
9	A9	+5V	+5V DC Sensor Supply
10	A10	BATTERY GROUND	Battery Negative
11	A11	BATTERY GROUND	Battery Negative
12	A12	+8V	+8V DC Sensor Supply
13	A13	IGNITION INPUT	Ignition Switch
14	A14	AVI 10	Starter Switch
15	A15	AVI 9	Manifold Pressure Sensor
16	A16	AVI 2	Electronic Throttle Main Signal (TPS 1) DBW
17	A17	AVI 3	Electronic Throttle Sub Signal (TPS 2) DBW
18	A18	DPO 1	Tachometer
19	A19	INJ 1	Injector #1
20	A20	INJ 2	Injector #2
21	A21	INJ 3	Injector #3
22	A22	INJ 4	Injector #4
23	A23	DPO 3	Intake AVCS Solenoid RH (-)
24	A24	DPO 5	Exhaust AVCS Solenoid LH (-) (MY04 GT)
25	A25	DPO 6	Self-Shutoff Control (ECR)
26	A26	+12V (INJ)	Fused Power
27	A27	INJ 5	Injector #5 (MY05 3.0R) / Spare Output (MY04 GT)
28	A28	INJ 6	Injector #6 (MY05 3.0R) / Spare Output (MY04 GT)
29	A31	STEP1 P1	Radiator Fan Control Relay (MY05 3.0R) / Spare Output (MY04 GT)
30	A32	STEP2 P2	Fuel Pump Control Unit (Relay) Signal 1
31	A33	STEP3 P3	Starter Relay
32	A34	STEP4 P4	Fuel Pump Control Unit Signal 2

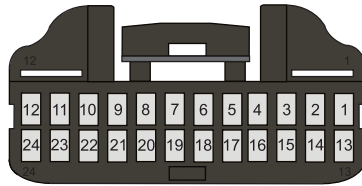

CONNECTOR (24 PIN)  
REAR VIEW (WIRE SIDE)

Position (24 Pin Plug)	ECU Connector (26 Pin Plug)	Function	Description
1	B1	TRIGGER	Crankshaft Position Sensor (+)
2	B2	HOME	Intake Camshaft Position Sensor LH (+)
3	B3	AVI 7	Air Temperature Sensor
4	B4	AVI 8	Coolant Temperature Sensor
5	B5	TRIGGER -	Crankshaft Position Sensor (-)
6	B6	HOME -	Not Used
7	B7	SPI 4	Exhaust Camshaft Position Sensor RH (+) (MY04 GT) / Spare Synchronised Pulsed Input (MY05 3.0R)
8	B8	SPI 1	Spare SPI (Optional Flex Fuel Input) (MY05 3.0R) / Exhaust Camshaft Position Sensor LH (+) (MY04 GT)
9	B9	SPI 2	* Brake Switch / Clutch Switch (MY04 GT)
10	B10	SPI 3	Intake Camshaft Position Sensor RH (+)
11	B11	+12V (ECU)	Fused Power
12	B12	AVI 6	Mass Air Flow Sensor Signal
13	B13	AVI 1	A/C Request
14	B14	SIGNAL GROUND	Signal Ground for Input Sensors
15	B15	SIGNAL GROUND	Signal Ground for Input Sensors
16	B16	SIGNAL GROUND	Signal Ground for Input Sensors
17	B23	CAN HIGH	CAN High (Vehicle Bus)
18	B24	CAN LOW	CAN Low (Vehicle Bus)
19	B19	DPO 4	Intake AVCS Solenoid LH (-)
20	B20	AVI 5	APP Sub Signal (APP 2)
21	B21	KNOCK 1	Knock Sensor Signal 1
22	B22	KNOCK 2	Knock Sensor Signal 2
23	B25	DBW 1	Drive By Wire Motor (-)
24	B26	DBW 2	Drive By Wire Motor (+)

#### NOTES

\* SPI 2 can be used to support Brake Switch for both (MY05 3.0R) and (MY04 GT) OR SPI 2 can be used to support Clutch Switch input for (MY04 GT). See Jumper ID Settings section.

# ***Haltech***

**ENGINE MANAGEMENT SYSTEMS**





## WARNING - HALTECH OFF-ROAD USAGE POLICY

It is unlawful to tamper with your vehicle's emissions equipment.

Haltech products are designed and sold for sanctioned off-road/competition non-emissions controlled vehicles only. Using Haltech products for street/road use on public roads is prohibited by law. It is the responsibility of the installer and/or user of this product to ensure compliance with all applicable local and federal laws and regulations. Please check with your local vehicle authority before using any Haltech product

### INSTALLATION OF HALTECH PRODUCTS

No responsibility whatsoever is accepted by Haltech for the fitment of Haltech Products. The onus is clearly on the installer to ensure that both their knowledge and the parts selected are correct for that particular application. Any damage to parts or consequential damage or costs resulting from the incorrect installation of Haltech products are totally the responsibility of the installer.

Always disconnect the battery when doing electrical work on your vehicle. Avoid sparks, open flames or use of electrical devices near flammable substances. Do not run the engine with a battery charger connected as this could damage the ECU and other electrical equipment. Do not overcharge the battery or reverse the polarity of the battery or any charging unit. Disconnect the Haltech ECU from the electrical system whenever doing any welding on the vehicle by unplugging the wiring harness connector from the ECU. After completing the ECU installation, make sure there is no wiring left uninsulated. Uninsulated wiring can cause sparks, short circuits and in some cases fire. Before attempting to run the engine ensure there are no leaks in the fuel system. All fuel system components and wiring should be mounted away from heat sources, shielded if necessary and well ventilated. Always ensure that you follow workshop safety procedures. If you're working underneath a jacked-up car, always use safety stands!

### HALTECH LIMITED WARRANTY

Unless specified otherwise, Haltech warrants its products to be free from defects in material or workmanship for a period of 12 months from the date of purchase, valid in the original country of purchase only. Proof of purchase, in the form of a bill of sale or receipted invoice, which indicates that the product is within the warranty period, must be presented to obtain warranty service. Haltech suggests that the purchaser retain the dealer's dated bill of sale/receipt as evidence of the date of retail purchase. If the Haltech product is found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of purchase. This shall constitute the sole liability of Haltech. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations, either expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Haltech be liable for special or consequential damages.

### PRODUCT RETURNS

Please include a copy of the original purchase invoice along with the unused, undamaged product and its original packaging. Any product returned with missing accessory items or packaging will incur extra charges to return the item to a re-saleable condition. All product returns must be sent via a freight method with adequate tracking, insurance and proof of delivery services. Haltech will not be held responsible for product returns lost during transit. The sale of any sensor or accessory that is supplied in sealed packaging is strictly non-refundable if the sealed packaging has been opened or tampered with. This will be clearly noted on the product packaging. If you do not accept these terms please return the sensor in its original unopened packaging within 30 days for a full refund.

**Returning a sensor or accessory product within 30 days of purchase:** Product may be returned for credit or full refund. (Any sealed packaging must not have been opened or tampered with)

**Returning a sensor or accessory product after 30 days of purchase:** Product may be returned for credit only (no refunds given) and is subject to a 10% Restocking fee. (Any sealed packaging must not have been opened or tampered with)

## Need more help?



**Intl:** +61 2 9729 0999  
**USA:** +1 888 298 8116



**Intl:** [support@haltech.com](mailto:support@haltech.com)  
**USA:** [usasupport@haltech.com](mailto:usasupport@haltech.com)



[www.haltech.com](http://www.haltech.com)



[/Haltechecu](https://www.youtube.com/Haltechecu)



[/HaltechEngineManagement](https://www.facebook.com/HaltechEngineManagement)